

Ball Joint Boot

PH-A				
PH-A001UL 	PH-A002 UL 	PH-A003 UL 	PH-A004 UL 	PH-A005 L
PH-A006 UL 	PH-A007 U 	PH-A008 	PH-A009 	PH-A010UL
PH-A011UL 	PH-A012U 	PH-A013UL 	PH-A014UL 	PH-A015UL
PH-A016UL 	PH-A017UL 	PH-A018UL 	PH-A019UL 	PH-A020UL
PH-A021UL 	PH-A022L 	PH-A023UL 	PH-A024U 	PH-A026UL
PH-A027U 	PH-A028U 	PH-A029UL 	PH-A030UL 	PH-A031UL

(U): Upper steel ring (L): Low steel ring

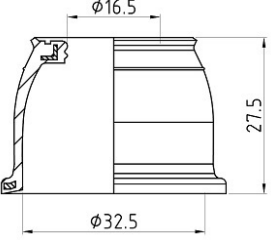
Ball Joint Boot

PH-A				
PH-A032UL	PH-A033UL	PH-A034UL	PH-A035U	PH-A036U
PH-A037UL	PH-A038UL	PH-A039UL	PH-A040UL	PH-A041UL
PH-A042U	PH-A043UL	PH-A044UL	PH-A045UL	PH-A046UL
PH-A047UL	PH-A048UL	PH-A049UL	PH-A050UL	PH-A051UL
PH-A052	PH-A053UL	PH-A054UL	PH-A055UL	PH-A056U

(U): Upper steel ring (L): Low steel ring



Ball Joint Boot

PH-A				
PH-A057UL				
				

(U): Upper steel ring (L): Low steel ring

Ball Joint Boot

PH-B				
PH-B001	PH-B002	PH-B003	PH-B004	PH-B005 U
PH-B006	PH-B007	PH-B008 U	PH-B009 U	PH-B010 U
PH-B011	PH-B012	PH-B013	PH-B014	PH-B015
PH-B016	PH-B017UL	PH-B018	PH-B019	PH-B020
PH-B021	PH-B022	PH-B023		

(U): Upper steel ring (L): Low steel ring

Ball Joint Boot

PH-C				
PH-C001	PH-C002	PH-C003 U	PH-C004 U	PH-C005 U
PH-C006	PH-C007U	PH-C008	PH-C009	PH-C010
PH-C011UL	PH-C012	PH-C013	PH-C014U	

(U): Upper steel ring (L): Low steel ring